RF RGBW Remote Controller

09.02818.04160

Product Data

| F© | CE | | (4) | |
|----|----|--|-----|--|
|----|----|--|-----|--|

Important: Read All Instructions Prior to Installation

Function introduction



Click to switch ON/OFF

<u>ل</u>

R

G

В

Ϋ́

Red channel: Click to turn off/on, Press and hold down to increase/decrease light intensity

Green channel: Click to turn off/on, Press and hold down to increase/decrease light intensity

Blue channel: Click to turn off/on, Press and hold down to increase/decrease light intensity

White channel: Click to turn off/on, Press and hold down to increase/decrease light intensity

Play & pause mode, click to play or pause running mode

Return to previous status

Save color, press and hold down to save, S click to recall the saved

Speed down, press and hold down to speed down the running mode

Speed up, press and hold down \blacktriangleright to speed up the running mode

Brightness down, press and hold down ¢ to decrease light intensity

Brightness up, press and hold down to ø increase light intensity



8 zones, click to select a zone, press and hold down to turn on/off corresponding zone

| Output | RF signal | |
|-----------------------|---|--|
| Operation Frequency | 868/915/434MHz | |
| Power Supply | 3.7V(Lithium battery, USB charging capability) | |
| Operating temperature | 0-40°C | |
| Relative humidity | 8% to 80% | |
| Dimensions | 115.4x58.8x12mm | |

· Control 8 zones of receivers separately

RGBW controller

- · Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

Safety & Warnings

This device contains a button lithium battery that shall be stored and disposed properly.

DO NOT expose the device to moisture.

Operation

Pair with RF receiver

| Turn on | Click "Learning Key" | Click one of the | Touch the color wheel | LED lights connected with the RF |
|-----------|----------------------|------------------|-----------------------|----------------------------------|
| RF remote | on RF receiver | zone numbers:1-8 | 🚺 on the remote 🛛 🦳 | receiver will flicker once |

→ The receiver is paired with corresponding zone successfully.

Save color/scene/mode:

| Turn on | Click one of the paired | Operation the buttons to | Press and hold down button S until |
|-----------|-------------------------|-------------------------------|------------------------------------|
| RF remote | zone numbers | select a color /mode you like | the LED indicator flashes once |

→ Immediately click any of the zone numbers that you would like to save the color/scene to $\rightarrow_{\rm RF\ receiver\ will\ flash} {\rm The\ color/scene\ is} \\ {\rm saved\ successfully} \\$ saved successfully.

Recall the saved colors/scenes:

Turn on RF remote \rightarrow Click any of the zone numbers you \rightarrow Click button $\mathbf{S} \rightarrow$ Click the zone number again to recall the scene/color

How to delete the pairing:

Press and hold down "Learning Key" on the receiver for over 3 seconds until connected LED lights flicker twice, which means the pairing is deleted successfully.

If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4



RF remote



LED indicator

Indicator will be on while remote is charging. Indicator will be off while it's full charged. Note: if the remote control is not used for a long time, please charge it every two months.